



PROGRAMADOR HORÁRIO DIGITAL JTHD

Passive and easy to handle, the programmer allows the time JTHD command devices (on / off), in accordance with established programs. Allows configuration of 32 programs (16 on/16 off) allowing control of any device connected to the output of the instrument, and the minimum interval between operations is 1 minute.

Technical data

Rated Voltage	220Vac
Rated frequency	60Hz
Consumption	4.4VA
Accuracy	±2.0 s/day
Operating Temperature	-20°C ~ +55°C
relative humidity	35% to 85% (No Condensate)
Interval between operations	15 minutes (min)
Battery duration	100 hours
programming	16 on/16 off
Interval between programs	1 minute
Periodicidade	Daily / Weekly
Additional Functions	Daylight saving manual
Peso	0.270 Kgs

Function



- D** – set days of the week to be programmed
- H** – hour setting
- Min** – minute setting
- Prog** – setting schedule
- ⌚** - Return to the main screen (clock)
- R** – Reset (resets all settings)
- C** – present "cancel / recover"

How to Programming

Setting the Clock:

- Press **⌚** and simultaneously:
 The key "D" to adjust the current day
 The key "H" to adjust the hour
 The key "M" to adjust the minutes

Set of programs:

- Press the "Prog" to enter the program 1
 In the upper screen will appear indicating ON, then you can set the time to active the program 1....
- Press "D" to set the days of the week that can be chosen according to various pre-set combinations:


MO	TU	WE	TH	FR	SA	SU
MO	TU	WE	TH	FR	SA	--
MO	TU	WE	TH	FR	--	--
--	--	--	--	--	SA	SU
MO	TU	WE	--	--	--	--
--	--	--	TH	FR	SA	--
MO	--	WE	--	FR	--	--
--	TU	--	TH	--	SA	--
MO	--	--	--	--	--	--
--	TU	--	--	--	--	--
--	--	WE	--	--	--	--
--	--	--	TH	--	--	--
--	--	--	--	FR	--	--
--	--	--	--	--	SA	--
--	--	--	--	--	--	SU

- Press "H" to set the time
- Press "Min" to set the minutes
- Press "Prog" and will appear on the screen OFF indicating that you must set the time to turn off the program 1
- Repeat these steps for adjusting the other programs if necessary.



Function Manual / Automatic:

- Press the "Manual" and at the bottom of the screen will appear:
ON – Means that the instrument were always in connected
AUTO – Means that the instrument were in automatic mode operation.
OFF – Means that the instrument were permanent switched off.

Wiring Diagram

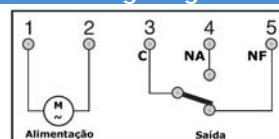

Wiring Diagram

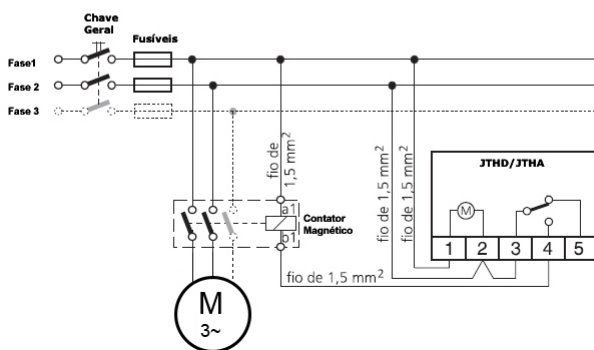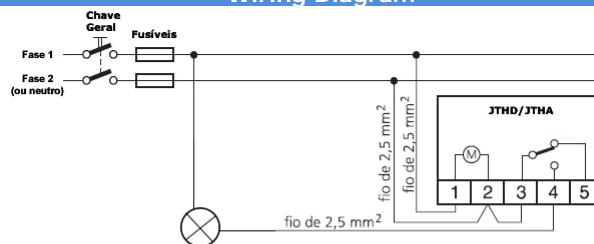

Dimensions

